 


Indication mode change of current fuel mileage and average fuel mileage

If the "km/h" for speed and "km" for mileage are selected, the fuel mileage can be switched to "km/L or L/100km".

Press and hold **FCD** button to switch between "km/h or L/100km".



Current fuel mileage

Current fuel mileage shows the current, or instant fuel mileage you are getting. When your motorcycle speed is 3 mph (5 km/h) or below, "---" is displayed.

Average fuel mileage

The average fuel mileage is based on the each tripmeter A and tripmeter B. The average fuel mileage since tripmeter was reset. When "--:-" is displayed, see your dealer for service.

Average fuel mileage is also reset when the tripmeter is reset. ➔ **P.23**

Air temperature gauge (AIR)

Display range: 14 to 122 °F (-10 to 50 °C)

- Below 15 °F (-11 °C): "--" displays
- Above 122 °F (50 °C): Air temperature gauge (flashing digits)
- ▶ The temperature readout may be incorrect at low speeds due to reflected heat.