

# Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

## (P) Parking brake indicator

VFR1200XD/XDA

Lights as a reminder that you have not released the parking brake lever. ➡ P.39

## Low oil pressure indicator

Comes on when the ignition switch is turned to the ON position. Goes off when the engine starts.

**If it comes on while engine is running:** ➡ P.109

## (ABS) ABS (Anti-lock Brake System) indicator

Comes on when the ignition switch is turned to ON position. Goes off when your speed reaches approximately 6 mph (10 km/h).

**If it comes on while riding:** ➡ P.110

## High coolant temperature indicator

**If it comes on while riding:**

➡ P.108

## PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned on with the engine stop switch in the (Run) position.

**If it comes on while engine is running:** ➡ P.109

