

Items		Frequency <sup>*1</sup>								Regular Replace	Refer to page		
		× 1,000 mi	0.6	4	8	12	16	20	24				
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4				
Emission-related Items	Fuel Line	⚙️			I		I		I			-	
	Throttle Operation	⚙️			I		I		I			96	
	Air Cleaner <sup>*2</sup>	⚙️				R			R			76	
	Spark Plug	⚙️	Every 16,000 mi (25,600 km): I Every 32,000 mi (51,200 km): R										-
	Valve Clearance	⚙️						I				-	
	Engine Oil			R		R		R		R	1 Year	83	
	Engine Oil Filter			R				R				83	
	Clutch Oil Filter <sup>*6</sup>			R				R				86	
	Engine Idle Speed	⚙️			I		I		I			-	
	Radiator Coolant <sup>*4</sup>				I		I		I	3 Years		88	
	Cooling System	⚙️			I		I		I			-	
	Secondary Air Supply System	⚙️						I				-	
	Evaporative Emission Control System <sup>*3</sup>	⚙️						I				-	

### Maintenance Level

- ⚙️ : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (➡ P. 145).
- ⚙️ : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

### Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R : Replace
- L : Lubricate
- C : Clean