

11. Fill the crankcase with the recommended oil (► P. 71, ► P. 152) and install the oil fill cap.

**Required oil****VFR1200X/XA****When changing oil & engine oil filter:**

3.5 US qt (3.3 L)

**When changing oil only:**

3.3 US qt (3.1 L)

**VFR1200XD/XDA****When changing oil & engine oil filter:**

4.1 US qt (3.9 L)

**When changing oil only:**

3.8 US qt (3.6 L)

12. Check the oil level. ► P. 81
13. Check that there are no oil leaks.
14. Install the right engine heat guard and right under cowl.