


Fuse Holder Fuses

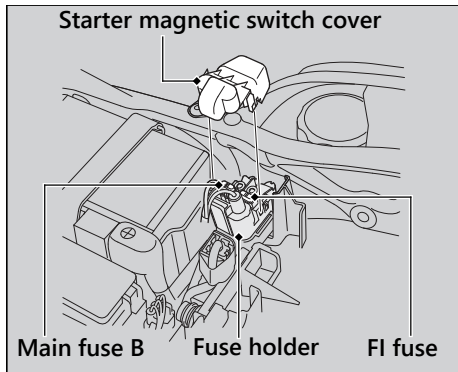

1. Remove the seat. ► P. 80
2. Remove the starter magnetic switch cover.

3. Pull the main fuse B and other fuse out one by one with the fuse puller and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
 - Spare fuses are provided in the fuse box. ► P. 125
 - A fuse puller is provided in the fuse box cover.
4. Reinstall parts in the reverse order of removal.

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.