

# Maintenance Schedule

ITEM		FREQUENCY	NOTE	ODOMETER READING (Note 1)								Refer to page
				× 1,000 mi	0.6	4	8	12	16	20	24	
				× 100 km	10	64	128	192	256	320	384	
NON-EMISSION-RELATED ITEMS		FINAL DRIVE OIL									R	103
		BRAKE FLUID	5					R			R	122
		BRAKE PAD WEAR										125
		BRAKE SYSTEM										122
	*	BRAKELIGHT SWITCH										—
	*	HEADLIGHT AIM										—
		CLUTCH SYSTEM										108
		SIDE STAND										136
	*	SUSPENSION										—
	*	NUTS, BOLTS, FASTENERS										—
	**	WHEELS/TIRES										—
	**	STEERING HEAD BEARINGS										—

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 212 ).

\*\*In the interest of safety, we recommend these items be serviced only by your Honda dealer.