


## Side Cover Removal

---

Refer to *Safety Precautions* on page 62 .

The left side cover (1) must be removed to service the main fuse and the battery.

### LEFT SIDE

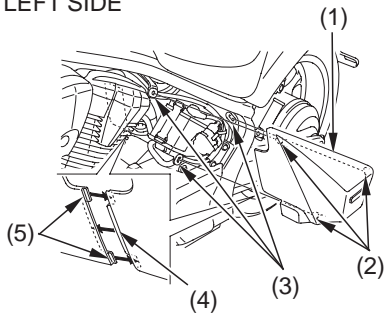

- |                     |                           |
|---------------------|---------------------------|
| (1) left side cover | (4) left side cover tab   |
| (2) prongs          | (5) right side cover tabs |
| (3) frame grommets  |                           |

### Left Side Cover Removal

1. Carefully pull the left side cover out until the prongs (2) are clear of the frame grommets (3).
2. Remove the left side cover.

### Left Side Cover Installation

1. Align the left side cover tab (4) with the right side cover tabs (5).
2. Position the left side cover so the prongs are aligned with the frame grommets.
3. Push the prongs in.