


## Spark Plugs

---

5. Clean any dirt from around the spark plug bases.
6. Disconnect the spark plug caps (11).  
Take care to avoid damaging the spark plug wire when disconnecting the caps.
7. Using a spark plug wrench, remove the spark plugs.
8. Inspect the electrodes and center porcelain for deposits, corrosion, or carbon fouling. If the corrosion or deposits are heavy, replace the plug. Clean a carbon or wet-fouled plug with a plug cleaner, if available, or a wire brush.

### RIGHT SIDE

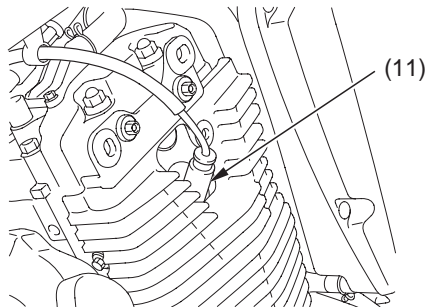

(11) spark plug cap