


## Rear Suspension Spring Pre-load

Refer to *Safety Precautions* on page 62 .

RIGHT SIDE

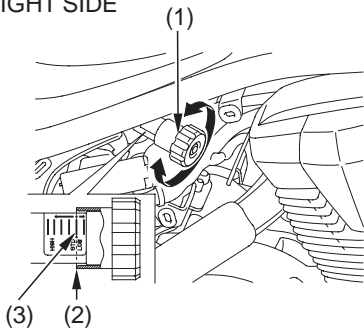

- (1) adjuster knob
- (2) end of adjuster knob
- (3) indicator line

The spring pre-load adjuster knob ( 1 ) has 35 spring pre-load positions (clicks) or more for different load or riding conditions.

To adjust the spring pre-load, turn the adjuster knob.

To adjust to the standard position:

1. Remove the right side cover (page 77 ).
2. Turn the spring pre-load adjuster knob counterclockwise until it will no longer turn (lightly seats).  
This is the full LOW setting.
3. Turn the adjuster clockwise by 6 clicks.  
At that position, the end of the adjuster knob ( 2 ) should be aligned with the indicator line ( 3 ). This is the standard position.

(cont'd)