

## Changing Air Cleaner Element

Use a new Honda Genuine air cleaner element or an equivalent specified for your motorcycle.

### NOTICE

Using the wrong air cleaner element can result in serious damage to the engine.

1. Remove the bolts, washers and air cleaner housing cover.
2. Remove the air cleaner element.
3. Thoroughly clean the inside of the air cleaner case.
4. Install the new air cleaner element.
5. Reinstall the air cleaner housing cover, washers and bolts.
6. Tighten the bolts.

**Torque:** 1.1 lbf·ft (1.5 N·m, 0.2 kgf·m).

