


2. Remove the caps, bolts and washers.
3. Carefully pull the front over head covers on both sides out until the prongs are clear of the engine grommets.
4. Remove the front over head center cover.

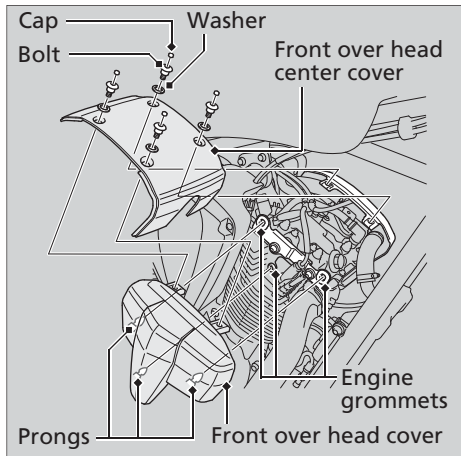

5. Disconnect the spark plug cap.
6. Clean any dirt from around the spark plug base.
7. Remove the spark plug using a spark plug wrench provided in the tool kit.

