


## Rear Wheel

### Removal

1. Park on a firm, level surface.
2. Support your motorcycle securely and raise the rear wheel off the ground using a maintenance stand or a hoist.
3. Remove the exhaust pipe joint nuts.

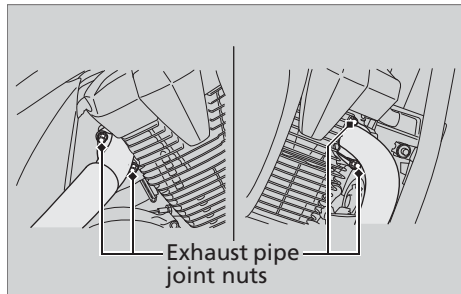

4. Remove the muffler bracket bolt A, B, nuts and washers.
5. Remove the muffler.

