
## Seat

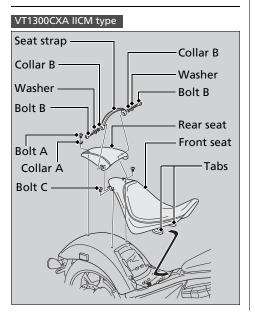

## I Removal

- 1. Remove the bolt A and collar A.
- **2.** Remove the seat strap by removing the bolts B, washers and collars B.
- **3.** Remove the rear seat.
- 4. Remove the bolts C.
- **5.** Pull the front seat back and up.