


Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence ➤ P. 28
- Check that there is gasoline in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is on
 - ▶ If the indicator light is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Make sure engine stop switch is in RUN  position ➤ P. 26
- Make sure the side stand is raised.
- Check for a blown fuse ➤ P. 103
- Check for a loose battery connection or battery terminal corrosion ➤ P. 45, 55
- Check the condition of the battery ➤ P. 99

If the problem continues, have your motorcycle inspected by your dealer.