


# Battery

The battery is located in the battery box below the seat.

## Removal

1. Make sure the ignition switch is OFF.
2. Remove the seat (page 77 ).
3. Remove the plastic storage bag.
4. Remove the battery cover (1) by removing the screw (2).


## UNDER SEAT

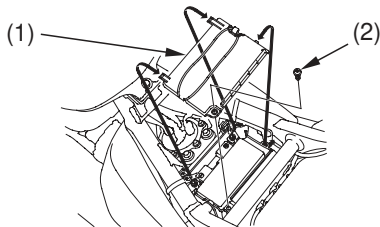

- (1) battery cover  
(2) screw

5. Disconnect the negative (−) terminal lead (3) from the battery first.
6. Disconnect the positive (+) terminal lead (4).

## UNDER SEAT

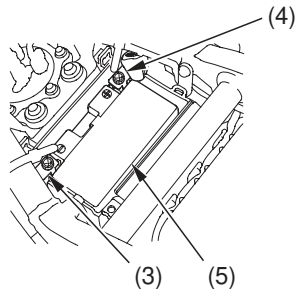

- (3) negative (−) terminal lead  
(4) positive (+) terminal lead  
(5) battery