










## Maintenance Schedule

Items		Frequency	Odometer Reading*1							Refer to page	
			× 1,000 mi	0.6	4	8	12	16	20		24
			× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0		38.4
Emission-related Items	Fuel Line					I		I		I	-
	Throttle Operation					I		I		I	73
	Air Cleaner*2						R			R	71
	Crankcase Breather*3				C	C	C	C	C	C	72
	Spark Plug				I	R	I	R	I	R	51
	Valve Clearance			I		I		I		I	-
	Engine Oil		Initial = 600 mi (1,000 km) or 1 month: <b>R</b> Regular = Every 8,000 mi (12,800 km) or 12 months: <b>R</b>							53	
	Engine Oil Filter			R		R		R		R	55
	Engine Idle Speed			I	I	I	I	I	I	I	-
	Radiator Coolant*4					I		I		R	57
	Cooling System					I		I		I	-
	Secondary Air Supply System					I		I		I	-
Evaporative Emission Control System*5						I			I	-	

### Maintenance Level

 : Intermediate. We recommend service by your Honda dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (▶ P. 112).

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

### Maintenance Legend

**I** : Inspect (clean, adjust, lubricate, or replace, if necessary)

**C** : Clean

**R** : Replace