


Front Wheel

Removal

1. Park on a firm, level surface.
2. Remove the front axle bolt.

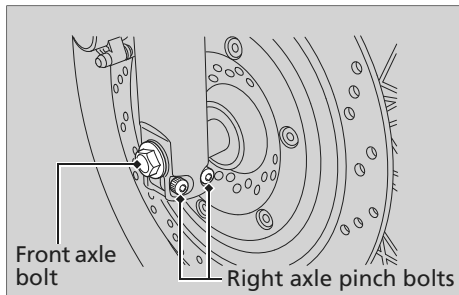

3. Loosen the right and left axle pinch bolts.

4. Support your motorcycle securely and raise the front wheel off the ground using a maintenance stand or a hoist.