

**Fuel reserve indicator**

Comes on briefly when the ignition switch is turned to the ON position.

When this indicator comes on, remaining fuel approximately 0.87 US gal (3.3 L)

**Turn signal indicator****High beam indicator****Neutral indicator**

Comes on when the transmission is in Neutral.