
Storage Equipment

Helmet holder is located on the left side below the seat.

Helmet holder

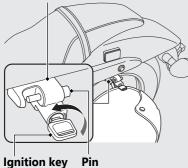

Unlocking

Insert the ignition key and turn it counterclockwise.

Locking

Hang your helmet on the holder pin and push it in to lock.

2 Remove the key.

▶ Use the helmet holder only when parked.

AWARNING

Riding with a helmet attached to the holder can interfere with the rear wheel or suspension and could cause a crash in which you can be seriously hurt or killed.

Use the helmet holder only while parked. Do not ride with a helmet secured by the holder.