

Items		Frequency	Odometer Reading*1							Refer to page	
			× 1,000 mi	0.6	4	8	12	16	20		24
			× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0		38.4
Emission-Related Items	Fuel Line	🔧				I		I		I	–
	Throttle Operation	🔧				I		I		I	75
	Air Cleaner*2						R			R	49, 59
	Crankcase Breather*3			C	C	C	C	C	C	C	76
	Spark Plug			I	R	I	R	I	R	R	53
	Valve Clearance	🔧		I		I		I		I	–
	Engine Oil		Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 8,000 mi (12,800 km) or 12 months: R							57	
	Engine Oil Filter			R		R		R		R	57
	Engine Idle Speed	🔧		I	I	I	I	I	I	I	–
	Radiator Coolant*4					I		I		R	60
	Cooling System	🔧				I		I		I	–
	Secondary Air Supply System	🔧				I		I		I	–
	Evaporative Emission Control System*5	🔧					I			I	–

**Maintenance Level**

🔧 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (📖 P. 115).

🔧 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

**Maintenance Legend**

I : Inspect (clean, adjust, lubricate, or replace, if necessary)  
 R : Replace  
 C : Clean