


## Battery

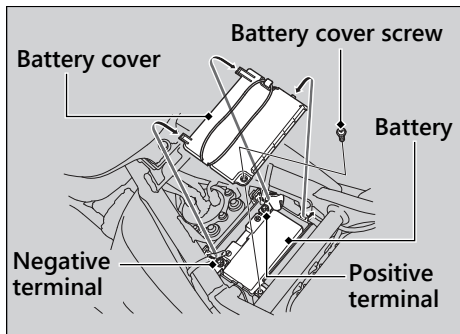

### Removal

Make sure the ignition switch is in the OFF position.

1. Remove the seat. ➤ P. 51
2. Remove the battery cover by removing the screw.

3. Disconnect the negative  $\ominus$  terminal from the battery.
4. Disconnect the positive  $\oplus$  terminal from the battery.
5. Remove the battery taking care not to drop the terminal nuts.

### Installation

Install the parts in the reverse order of removal. Always connect the positive  $\oplus$  terminal first. Make sure that bolts and nuts are tight.

Tighten the battery cover screw.

**Torque:** 0.7 lbf-ft (1 N-m, 0.1 kgf-m)

Make sure the clock information is correct after the battery is reconnected. ➤ P. 19  
For proper handling of the battery, see "Maintenance Fundamentals." ➤ P. 40  
"Battery Goes Dead." ➤ P. 92