

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 80
<b>Overheating (High coolant temperature indicator is on)</b> .....	P. 81
<b>Warning Indicators On or Flashing</b> .....	P. 82
Low Oil Pressure Indicator .....	P. 82
PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL).....	P. 82
<b>Tire Puncture</b> .....	P. 83
<b>Electrical Trouble</b> .....	P. 92
Battery Goes Dead .....	P. 92
Burned-out Light Bulb.....	P. 92
Blown Fuse .....	P. 96