

Maintenance Schedule

| ITEM | | FREQUENCY | NOTE | ODOMETER READING (Note 1) | | | | | | | Refer to page | | |
|-------------------------|-------------------------------------|-----------------------------|------|---------------------------|-----|--|------|------|------|------|---------------|-----|----|
| | | | | × 1,000 mi | 0.6 | 4 | 8 | 12 | 16 | 20 | | 24 | |
| | | | | × 1,000 km | 1.0 | 6.4 | 12.8 | 19.2 | 25.6 | 32.0 | 38.4 | | |
| EMISSIONS-RELATED ITEMS | * | FUEL LINE | | | | | I | | I | | I | — | |
| | * | THROTTLE OPERATION | | | | | I | | I | | I | — | |
| | | AIR CLEANER | 2 | | | | | R | | | R | 94 | |
| | | CRANKCASE BREATHER | 3 | | | C | C | C | C | C | C | 96 | |
| | | SPARK PLUGS | | | | I | R | I | R | I | R | 106 | |
| | * | VALVE CLEARANCE | | | | I | | I | | I | | I | — |
| | | ENGINE OIL | | | | INITIAL = 600 mi (1,000 km) or 1 month: R REGULAR = EVERY 8,000 mi (12,800 km) or 12 months: R | | | | | | 80 | |
| | | ENGINE OIL FILTER | | | | R | | R | | R | | R | 85 |
| | | RADIATOR COOLANT | 4 | | | | | I | | I | | R | 90 |
| | * | COOLING SYSTEM | | | | | | I | | I | | I | — |
| | * | SECONDARY AIR SUPPLY SYSTEM | | | | | | I | | I | | I | — |
| * | EVAPORATIVE EMISSION CONTROL SYSTEM | 5 | | | | | | I | | | I | — | |

* Should be serviced by your dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 206).