

## Side Cover Removal

Refer to *Safety Precautions* on page 58 .

(VT750C)

The right side cover must be removed to service the fuses.

The left side cover must be removed to access the storage compartment and check the color label.

(VT750C ABS)

The left side cover must be removed to access the storage compartment, to service the fuses, or to check the color label.

The right and left side covers can be removed in the same manner.


### Removal

1. Grasp the side cover ( 1 ).
2. Pull out.

### Installation

1. Position the cover so the prongs on the inside of the cover are line up above their securing slots.
2. Push the cover in place.

### LEFT SIDE

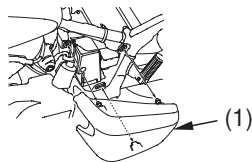

(1) side cover