


# Final Drive Oil

## Changing Oil

Refer to *Safety Precautions* on page 58 .

LEFT REAR

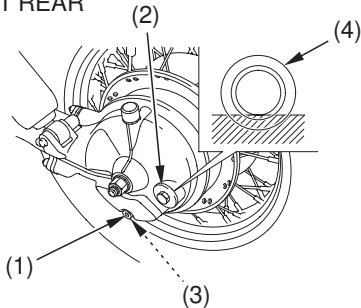

- (1) oil drain bolt
- (2) oil fill cap
- (3) sealing washer
- (4) oil fill hole

Change the oil with the final drive at normal operating temperature to assure complete and rapid draining.

1. Place the motorcycle on its side stand on a firm, level surface.
2. Place a drain pan under the oil drain bolt (1).
3. Remove the oil fill cap (2), oil drain bolt and sealing washer (3).
4. After the oil has completely drained, check that the sealing washer is in good condition. Reinstall the oil drain bolt with its sealing washer (or a new washer, if necessary) and tighten it to the specified torque:  
**9 lbf·ft (12 N·m , 1.2 kgf·m)**