


If You Have a Flat Tire

Wheel Removal

(VT750C)

1. Park your motorcycle on a firm, level surface.
2. Raise the rear wheel off the ground by placing a support block under the engine.
3. Remove the rear brake adjusting nut (1), disconnect the brake rod (2) from the brake arm (3) by pushing down on the rear brake pedal.
4. Disconnect the brake stopper arm (4) from the brake panel by removing the cotter pin (5), stopper arm nut (6), washer and rubber grommet.
5. Loosen the axle holding bolt (7).

RIGHT REAR

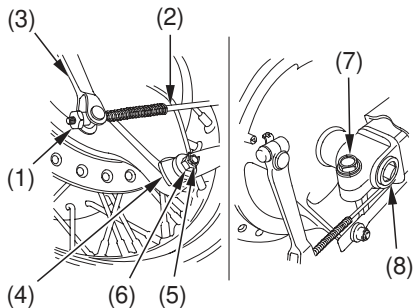

- | | |
|------------------------------|-----------------------|
| (1) rear brake adjusting nut | (6) stopper arm nut |
| (2) brake rod | (7) axle holding bolt |
| (3) brake arm | (8) rear axle shaft |
| (4) brake stopper arm | |
| (5) cotter pin | |