


## If You Have a Flat Tire

6. While holding the other end of the rear axle shaft (8) with a wrench, remove the rear axle nut (9).
7. Pull the rear axle shaft out and remove the side collar.
8. Move the wheel to the right to separate it from the final drive gear case.
9. Remove the wheel.

### LEFT REAR

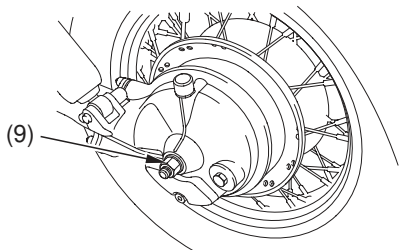

(9) rear axle nut

### Wheel Installation

(VT750C)

Before installing the wheel, check that the wheel hub and final drive gear splines are coated with molybdenum disulfide paste (USA only: Pro Honda Moly 60 Paste, or equivalent).

1. Position the wheel between the swingarm and the final drive gear case. Be sure the splines on the wheel hub fit into the final drive gear case.
2. Install the side collar into the brake panel.
3. Insert the rear axle shaft from the right side, through the right swingarm, brake panel, wheel hub and final drive gear case.

(cont'd)