

If a Fuse Blows

(VT750C ABS)

- The main fuse and FI fuse are located on the starter magnetic switch behind the left side cover.
- The circuit fuse box (including spare fuses) is located behind the left side cover.

Recommended Fuses


main fuse	30A
other fuses	30A, 20A, 10A
FI fuse	20A

1. To prevent an accidental short circuit, turn the ignition switch OFF before checking or replacing the fuses.

Main Fuse and FI Fuse Access:

2. To access the main fuse (1) and FI fuse (2), remove the left side cover (page 75).

LEFT SIDE

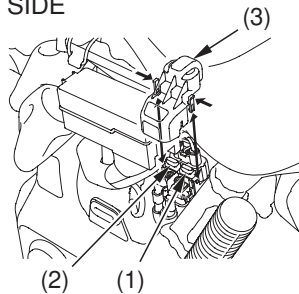

- (1) main fuse
- (2) FI fuse
- (3) starter magnetic switch cover

(cont'd)