

If a Fuse Blows

3. Remove the starter magnetic switch cover (3).
4. Pull the main fuse and/or FI fuse out. If it is blown (6), install the spare fuse (4) included in the fuse box.

Circuit Fuse Access:


5. Open the fuse box cover (5).
6. To check or replace a circuit fuse, pull the old fuse out of its retaining clips. Look for a burned wire inside the fuse. If the fuse is blown (6), replace it with a spare fuse (4) of the same rating.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

LEFT SIDE

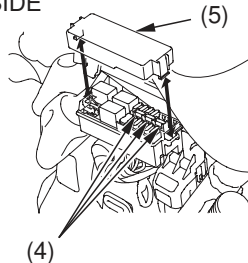

(4) spare fuses

(5) fuse box cover