

# Troubleshooting

**Engine Will Not Start** .....P. 77

**Overheating (High coolant temperature indicator is on)** .....P. 78

**Warning Indicators on or Flashing**.....P. 79

Low Oil Pressure Indicator.....P. 79

PGM-FI (Programmed Fuel Injection)

Malfunction Indicator Lamp (MIL) .....P. 79

ABS (Anti-lock Brake System) Indicator  
(VT750CS only).....P. 80

**Tire Puncture** .....P. 81

Tube Repair and Replacement .....P. 81

Removing Wheels.....P. 81

**Electrical Trouble** ..... P. 91

Battery Goes Dead ..... P. 91

Burned-out Light Bulb ..... P. 91

Blown Fuse ..... P. 95