

Installation

Install the parts in the reverse order of removal. Always connect the positive ⊕ terminal first. Make sure that bolts and nuts are tight.

Tighten the battery cover screw.

Torque: 0.7 lbf·ft (1 N·m, 0.1 kgf·m)

Make sure the clock information is correct after the battery is reconnected. ➤ P. 19

For proper handling of the battery, see "Maintenance Fundamentals." ➤ P. 41
"Battery Goes Dead." ➤ P. 98