

Troubleshooting

Engine Will Not Start	P. 82
Overheating (High coolant temperature indicator is on)	P. 83
Warning Indicators On or Flashing	P. 84
Low Oil Pressure Indicator	P. 84
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL).....	P. 84
ABS (Anti-lock Brake System) Indicator	P. 85
Tire Puncture	P. 86
Electrical Trouble	P. 98
Battery Goes Dead	P. 98
Burned-out Light Bulb.....	P. 98
Blown Fuse.....	P. 102