

## License Plate Light Bulb

1. Remove the screws and license light cover.
2. Pull the bulb out of the socket without turning it.
3. Install a new bulb and parts in the reverse order of removal.
  - After putting back the cover packing in place, install the license light cover.

