


## ■ Main Fuse

VT750C

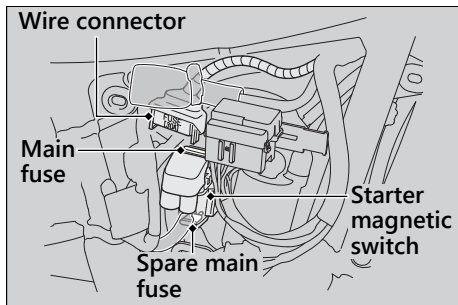

1. Remove the right side cover. ► P. 54
2. Disconnect the wire connector of the starter magnetic switch.
3. Pull the main fuse out and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
  - Spare main fuse is located under the starter magnetic switch.
4. Reinstall parts in the reverse order of removal.