


Rear Brake Lock

Be sure the rear brake is applied while starting and warming up the engine.

To Apply the Rear Brake Lock

While squeezing the rear brake lever (1a), pull the brake lock knob (1b).

▶ The rear brake lock will not function if the rear brake is not adjusted properly. (P74)

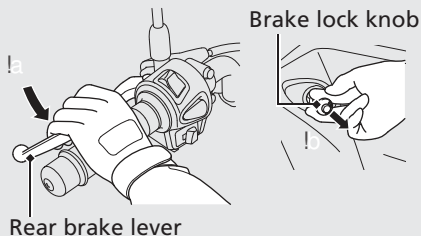

To Release the Rear Brake Lock

- Squeeze and hold the rear brake lever.
- Press the brake lock knob down while pushing in the center button.
 - ▶ Before riding, make sure that the rear brake is fully released so there is no drag on the rear wheel.

