









## Maintenance Schedule

Items		Frequency*1								Refer to page	
		x 1,000 mi	0.6	2.5	5	7.5	10	12.5	15		
		x 1,000 km	1.0	4	8	12	16	20	24		
Emission-related Items	Fuel Line 			I	I	I	I	I	I	-	
	Throttle Operation 			I	I	I	I	I	I	78	
	Air Cleaner*2						R			62	
	Crankcase Breather*3			C	C	C	C	C	C	63	
	Spark Plug				R		R		R	64	
	Valve Clearance 		I	I	I	I	I	I	I	-	
	Engine Oil		Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 5,000 mi (8,000 km) or 12 months: R								66
	Engine Oil Strainer Screen				C		C		C	68	
	Engine Idle Speed 		I	I	I	I	I	I	I	-	
	Radiator Coolant*5				I		I		I	70	
	Cooling System 				I		I		I	-	
Evaporative Emission Control System*4 					I			I	-		

### Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 106).
-  : Technical. In the interest of safety, have your scooter serviced by your dealer.

### Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R** : Replace
- C** : Clean