


### Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. ➤ [P. 30](#)
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
  - ▶ If the indicator light is on, contact your dealer as soon as possible.

### Starter Motor Does Not Operate

Check the following items:

- Make sure engine stop switch is  (Run) position. ➤ [P. 26](#)
- Make sure the side stand is raised.
- Check for a blown fuse. ➤ [P. 89](#)
- Check for a loose battery connection or battery terminal corrosion. ➤ [P. 51](#)
- Check the condition of the battery. ➤ [P. 86](#)

If the problem continues, have your scooter inspected by your dealer.