

Storing Your Scooter

If you store your scooter outdoors, you should consider using a full-body motorcycle cover. If you won't be riding for an extended period, follow these guidelines:

- Wash your scooter and wax all painted surfaces (except matte painted surfaces). Coat chrome pieces with rust-inhibiting oil.
- Place your scooter on its center stand and position a block so that both tires are off the ground.
- After rain, remove the body cover and allow the scooter to dry.
- Remove the battery (➔ P. 61) to prevent discharge. Charge the battery in a shaded, well ventilated area.
 - ▶ If you leave the battery in place, disconnect the negative ⊖ terminal to prevent discharge.

After removing your scooter from storage, inspect all maintenance items required by the Maintenance Schedule.

USA For more information about storage, refer to the Honda Winter Storage Guide, available from your dealer.

Transporting Your Scooter

If your scooter needs to be transported, it should be carried on a motorcycle trailer or a flatbed truck or trailer that has a loading ramp or lifting platform, and motorcycle tie-down straps. Never try to tow your scooter with a wheel or wheels on the ground.

NOTICE

Towing your scooter can cause serious damage to the transmission.