


Rear Brake Lock

Be sure the rear brake is applied while starting and warming up the engine.

Locking

Squeeze the rear brake lever and pull the brake lock knob.

- u The rear brake lock will not function if the rear brake is not adjusted properly. (P74)

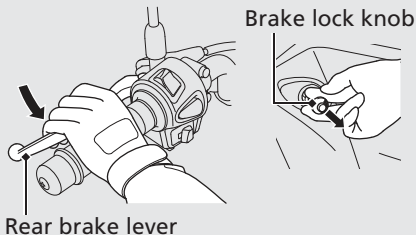

Unlocking

Squeeze the rear brake lever and press the brake lock knob down while pushing in the center button.

- u Before riding, make sure that the rear brake is fully released so there is no drag on the rear wheel.

