

### Starter Motor Operates But Engine Does Not Start

---

Check the following items:

- Check the correct engine starting sequence. ➤ P. 31
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
  - ▶ If the indicator light is on, contact your dealer as soon as possible.

### Starter Motor Does Not Operate

---

Check the following items:

- Check the correct engine starting sequence. ➤ P. 31
- Make sure engine stop switch is in the (Run) position. ➤ P. 26
- Check for a blown fuse. ➤ P. 90
- Check for a loose battery connection or battery terminal corrosion. ➤ P. 52, ➤ P. 61
- Check the condition of the battery.
  - P. 87

If the problem continues, have your scooter inspected by your dealer.