


Ignition switch

Switches the electrical system on/off, locks the steering, and operates the fuel lid and seat opener switch.

► Key can be removed when in the OFF position or  (Lock) position.

ON


Turns electrical system on for starting/riding.

SEAT FUEL

Operates the fuel lid and seat opener switch.

OFF

Turns engine off.

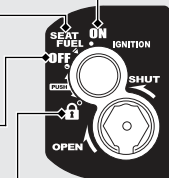

(Lock)

Locks steering.