

Air Cleaner ► Changing Air Cleaner Element

- Loosen the screw A.
- Remove the air cleaner housing cover by removing the screws B.
- Remove the air cleaner element.
- Remove the duct from the air cleaner element.
- Install the duct to the new air cleaner element.
- Install the new air cleaner element.
- Make sure the air cleaner element is installed securely.
- Install the parts in the reverse order of removal.

