

Troubleshooting

Engine Will Not Start	P. 92	Unstable Engine Operation Occurs	
Overheating (High coolant temperature indicator is on)	P. 93	Intermittently	P. 103
Warning Indicators On or Flashing	P. 94		
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL)	P. 94		
ABS (Anti-lock Brake System) Indicator	P. 95		
Other Warning Indications	P. 96		
Fuel Gauge Failure Indication.....	P. 96		
Tire Puncture	P. 97		
Electrical Trouble	P. 98		
Battery Goes Dead	P. 98		
Burned-out Light Bulb.....	P. 98		
Blown Fuse.....	P. 101		