

ENGINE OIL

Engine Oil Level Check

Check the engine oil level each day before riding the motorcycle.

The oil filler cap is in front of fuel tank and has a dipstick for measuring the oil level. Oil level must be maintained between the UPPER (1) and LOWER (2) level marks on the oil filler cap/dipstick (3).

The oil level cannot be checked accurately immediately after the engine has been run at high speed.


Make sure that motorcycle is standing upright on firm level ground while idling.

1. Park the motorcycle on a firm, level surface.
2. Start the engine and let it idle for 5 minutes. If the air temperature is below 10°C (50°F), let the engine idle for an additional 5 minutes (a total of 10 minutes).

An engine that is not warmed sufficiently may give an inaccurate (low) oil level reading. During idling, support the

motorcycle in an upright position to assure an accurate oil level reading. Stop the engine.

3. Immediately remove the oil filler cap/dipstick and wipe it clean.
4. Hold the motorcycle upright. Insert the oil filler cap/dipstick until it seats, but don't screw it in.

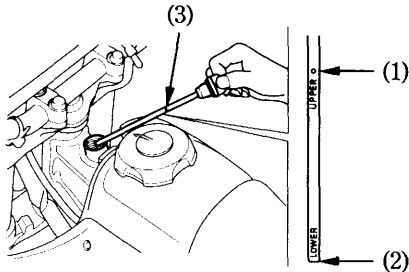

- (1) UPPER level mark (3) Oil filler cap/dipstick
(2) LOWER level mark