

Preparation

Before starting, insert the key, turn the ignition switch ON and confirm the following:

- The transmission is in neutral (neutral indicator light ON).
- The engine stop switch is at \odot (RUN).
- The fuel valve is ON.

NOTICE

Operating the engine with insufficient oil pressure can cause serious engine damage.


Starting Procedure

To restart a warm engine, follow the procedure for “High Air Temperature.”

Normal Air Temperature

$10^{\circ} - 35^{\circ}\text{C}$ ($50^{\circ} - 95^{\circ}\text{F}$)

1. Move the choke lever (1) up all the way to Fully ON (A), if the engine is cold.
2. With the throttle closed, press the start button.

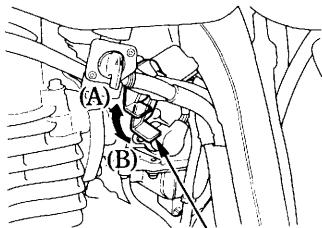

(1)

(1) Choke lever

(A) Fully ON

(B) Fully OFF