

Engine Oil u Changing Engine Oil & Filter

10. Install a new sealing washer onto the drain bolts. Tighten the drain bolts.

Crankcase

Torque: 18 lbf·ft (25 N·m, 2.5 kgf·m).

Down tube

Torque: 29 lbf·ft (39 N·m, 4.0 kgf·m).

11. Fill the oil tank with the recommended oil. (2 P. 41)

Required oil

When changing oil & engine oil filter:

2.06 US qt (1.95 liters)

When changing oil only:

2.0 US qt (1.9 liters)

- u To fill the oil tank to the upper level, oil should be add two steps.

12. Pour the recommended oil into the oil tank, up to the UPPER level mark.
13. Install the oil fill cap/dipstick securely.
14. Start the engine. Let it idle 5 minutes. During idling, support your motorcycle in an upright position on a firm, level surface to assure an accurate oil level reading.
15. Stop the engine. Remove the oil fill cap/dipstick.
16. Add the recommended oil up to the UPPER level mark. (Do not overfill.)
17. Reinstall the oil fill cap/dipstick.

NOTICE

Improper installation of the oil filter can result in serious damage to the engine.