


## Shroud

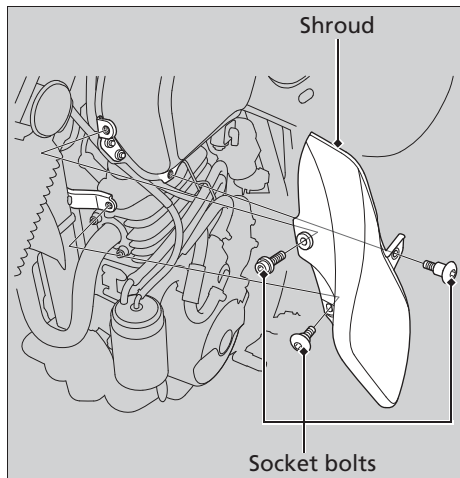

The shroud must be removed for access to the spark plug.

### Removal

1. Remove the socket bolts.
2. Remove the shroud.

### Installation

Install the parts in the reverse order of removal.