


# Removing & Installing Body Components

## Battery

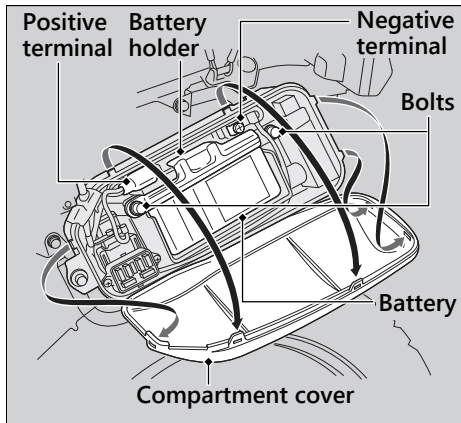

### Removal

Make sure the ignition switch is in the OFF position.

1. Remove the left side cover. ➤ P. 53
2. Open the battery compartment cover.

3. Remove the bolts and remove the battery holder.
4. Disconnect the negative  $\ominus$  terminal from the battery.
5. Disconnect the positive  $\oplus$  terminal from the battery.
6. Remove the battery taking care not to drop the terminal nuts.

### Installation

Install the parts in the reverse order of removal. Always connect the positive  $\oplus$  terminal first. Make sure that bolts and nuts are tight.

For proper handling of the battery, see "Maintenance Fundamentals." ➤ P. 41  
"Battery Goes Dead." ➤ P. 92