

- 10.** Install new sealing washers onto the drain bolts. Tighten the drain bolts.

Crankcase

**Torque:** 18 lbf-ft (25 N·m, 2.5 kgf·m)

Down tube

**Torque:** 29 lbf-ft (39 N·m, 4.0 kgf·m)

- 11.** Fill the oil tank with the recommended oil.  
► P. 44, ► P. 117

#### Required oil

**When changing oil & engine oil filter:**

2.06 US qt (1.95 L)

**When changing oil only:**

2.0 US qt (1.9 L)

- To fill the oil tank to the upper level, oil should be added in two steps.

- 12.** Pour the recommended oil into the oil tank, up to the upper level mark.

- 13.** Install the oil fill cap/dipstick securely.

- 14.** Start the engine. Let it idle 5 minutes.

During idling, support your motorcycle in an upright position on a firm, level surface to assure an accurate oil level reading.

- 15.** Stop the engine. Remove the oil fill cap/dipstick.

- 16.** Add the recommended oil up to the upper level mark. (Do not overfill.)

- 17.** Reinstall the oil fill cap/dipstick.

- 18.** Check the oil level. ► P. 58

- 19.** Check that there are no oil leaks.

#### NOTICE

Improper installation of the oil filter can result in serious damage to the engine.