

### Adjusting the Headlight Aim

---

You can adjust vertical aim of the headlight for proper alignment. Turn the screw in or out as necessary using a Phillips screwdriver. Obey local laws and regulations.

